


WOOD MOSAICS

installation instructions with cement glue



1 Spread the cement glue evenly on the support.

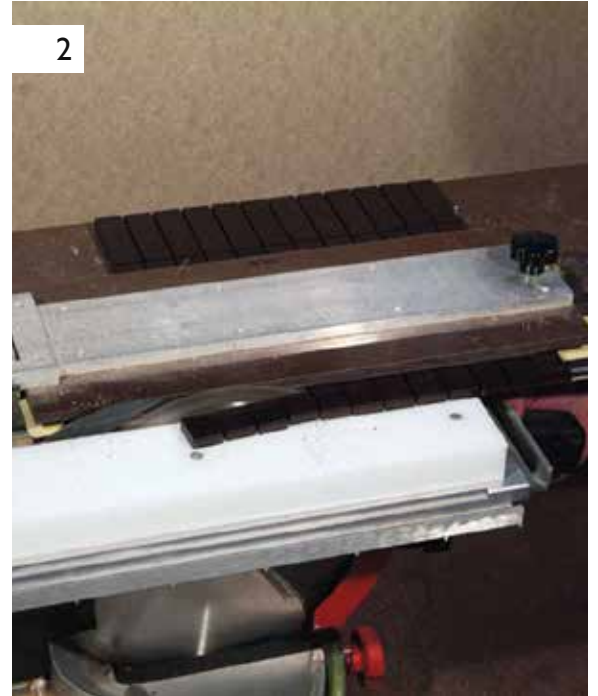

2 Cut the mosaic tile according to the desired dimensions.



3 Treat the cut edge with sealant.



4 Glue the mosaic to the support.