

ARIA

EDGE PASTE INSTALLATION


STEP 1.
Cut the boards mitred and glue them together.



STEP 2.
After glueing, mill cut the edges with a planer or router.



STEP 3.
Surface to the edge has to be secured by a masking tape.

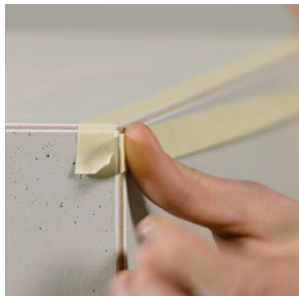

STEP 4.
Afterwards apply thinly the coating mass #1. Drying time should be at least 4-5 hours. For thicker application allow drying overnight.



JAR #1

STEP 5.
Take away the masking tape and make a fine grinding (150 grit).



STEP 6.
Seal with a matte varnish.



STEP 7.
In order to achieve the original concrete character wipe the varnished and processed area with the patina as final processing. JAR # 2



STEP 8.
Finally, for higher load capacity, the edges should be varnished again.

ATTENTION:

Before using the patina the bottle should be shaken well.